



Congratulations on purchasing Chicory's outdoor furniture!

We know you are looking forward to having your piece for years to come. Follow the steps below to ensure its longevity.

About Chicory's Teak Wood

Our Grade A Teak wood is naturally durable, making it an excellent choice for long term outdoor furniture. However, Teak has naturally occurring oils that will bleed until the furniture has weathered. To prevent fabric stains, it is imperative to follow the care instructions below until the furniture has weathered.

Initial Setup: Perform these steps before first use

Step 1: Wash: Spray the wood surface with water (DO NOT USE HIGH PRESSURE)

Step 2: Scrub: Dip a scouring pad in cold soapy water & gently scrub surface

Step 3: Rinse: Gently spray down your furniture rinsing away any remaining oils

Step 4: Dry

- Gently pat the surfaces dry with a cloth
- Let the furniture continue to dry out in the sun
- Once the wood is completely dry, place your cushions on the frame.

Now you are ready to sit back and relax on your outdoor furniture!

Long Term Care and Maintenance

Teak Wood Care: The only care your furniture needs is an occasional wash to remove any dust and oils that have built up over the seasons.

Step 1: Remove Cushions

Step 2: Wash: Spray the wood surface with water (DON'T USE HIGH PRESSURE)

Step 3: Scrub: Clean any buildup or visible stains by scrubbing with a scouring pad or a soft bristle brush.

Step 4: Dry

- Gently pat the surfaces dry with a cloth
- Let the furniture continue to dry out in the sun
- Once the wood is completely dry, place your cushions back on the frame.


Fabric Care for Oil Stains: Remove the fabric cover from cushion and wash on cold using detergent or hand wash using a mild cleaner and sponge.

Preventing Fading: Teak wood naturally fades from golden brown to silver-gray over time. To keep it golden brown use a Teak friendly cleaner.

When it Rains: Teak wood will bleed natural oils during rainfall. To prevent your cushions from being stained, bring them inside before the furniture gets wet, or cover with our All-Season Outdoor Protective Cover. Once the wood has a silvery-gray tone it has fully weathered and it's no longer necessary to perform this step.

Not Covered by Warranty: 1) Stains on fabric from teak oil, 2) damage caused by improper use of cleaners

chicory

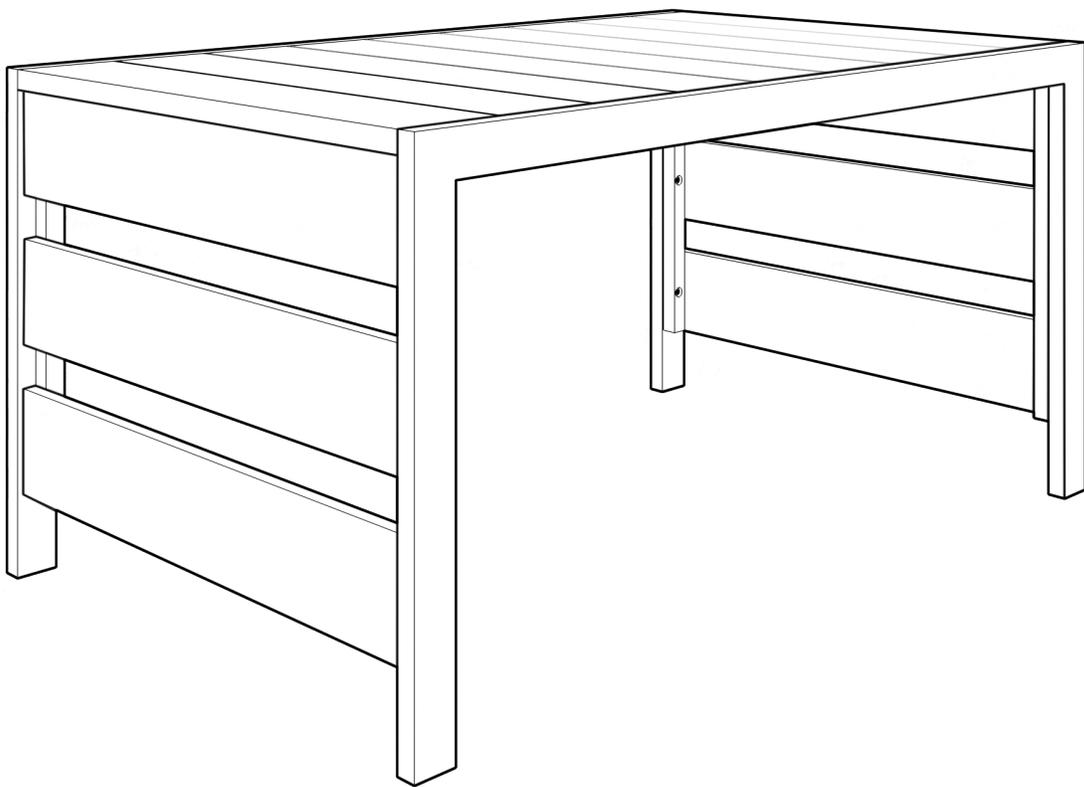

Nesting Table

You Should Have...


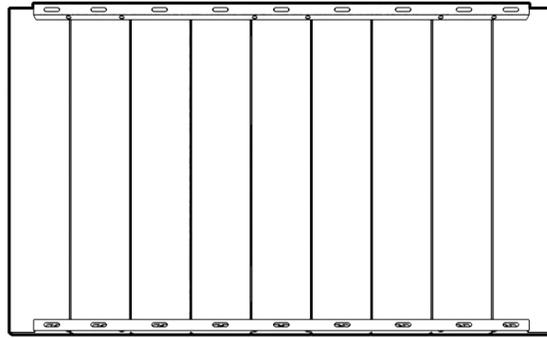


Table Top



2x Legs

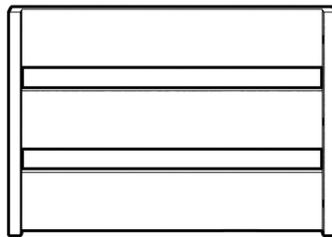

2x Side Panels



 
24x Washers



5mm x 25 Hex Bit



24x M6x30 Button Head Hex Screws




Ratchet

Note: In the event of a return, items must be sent back in their original packing.
Please retain them or it may prevent/delay our ability to resolve your request.

Step 1: Attach First Leg


NOTE: You can start with either leg, both are identical.

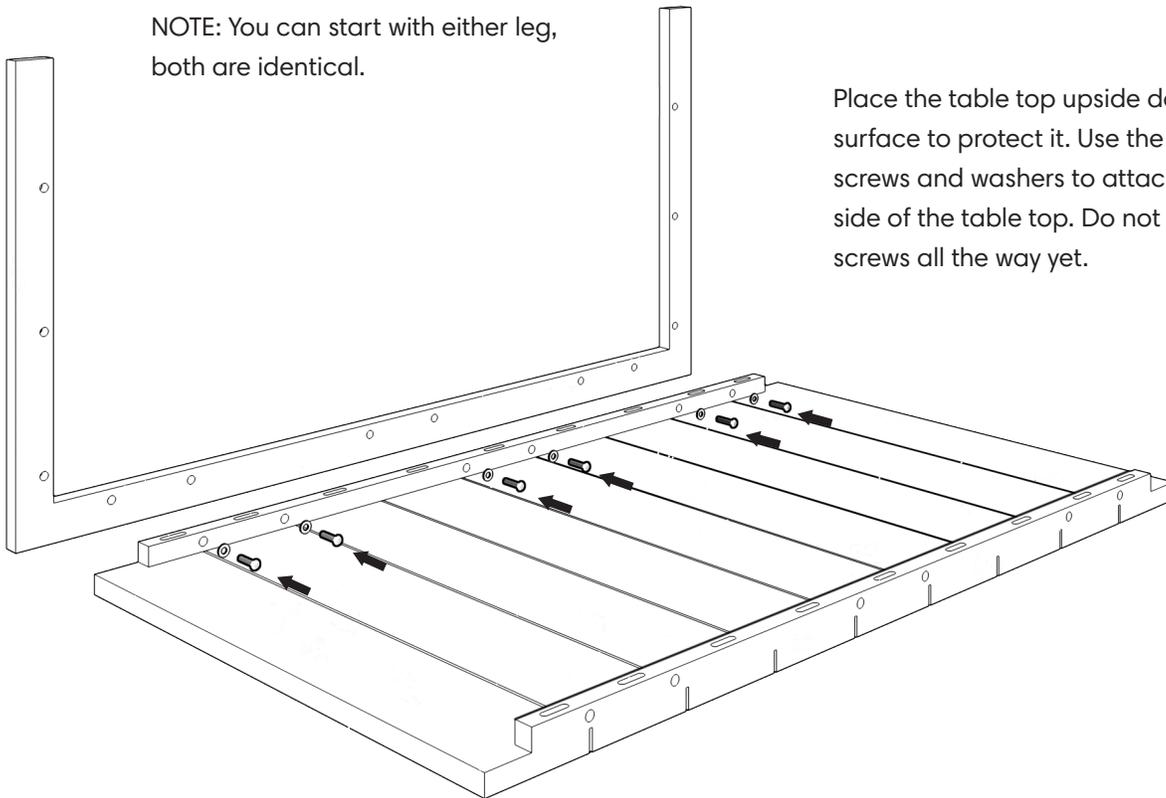

Place the table top upside down on a soft surface to protect it. Use the M6x30 hex screws and washers to attach legs to one side of the table top. Do not tighten the screws all the way yet.


Step 2: Attach Side Panels

NOTE: You can start with either side panel, both are identical.

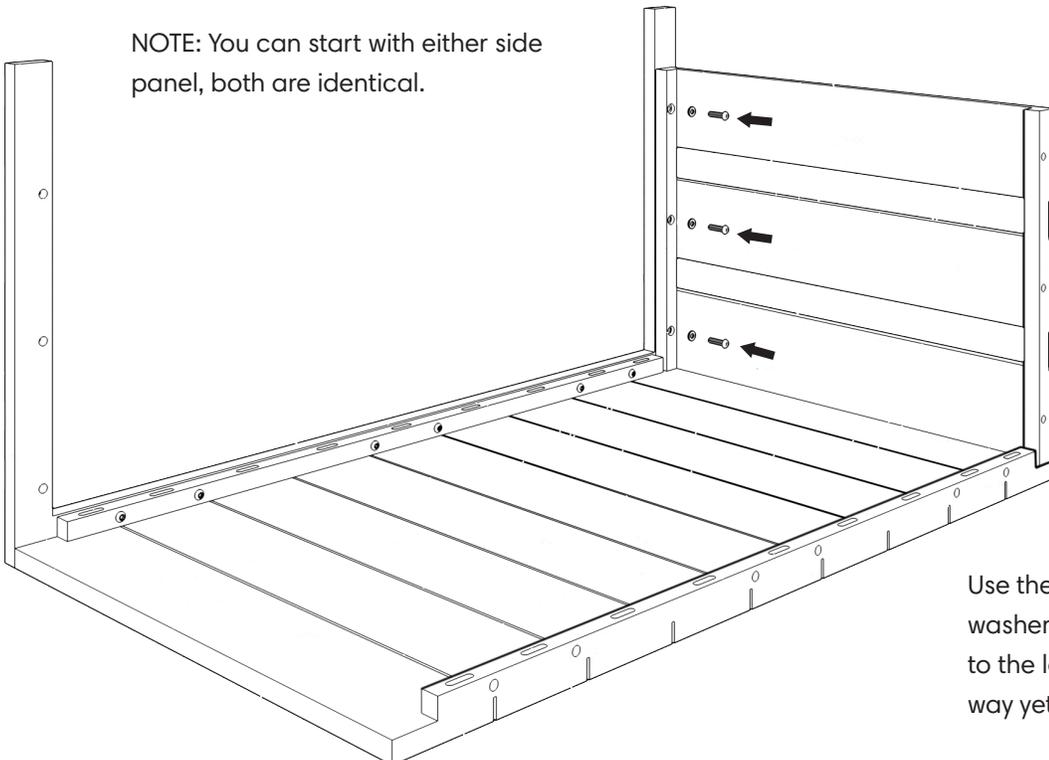

Use the M6x30 hex screws and washers to attach the side panels to the legs. Do not tighten all the way yet. Repeat for both sides.


Step 3: Attach Remaining Leg

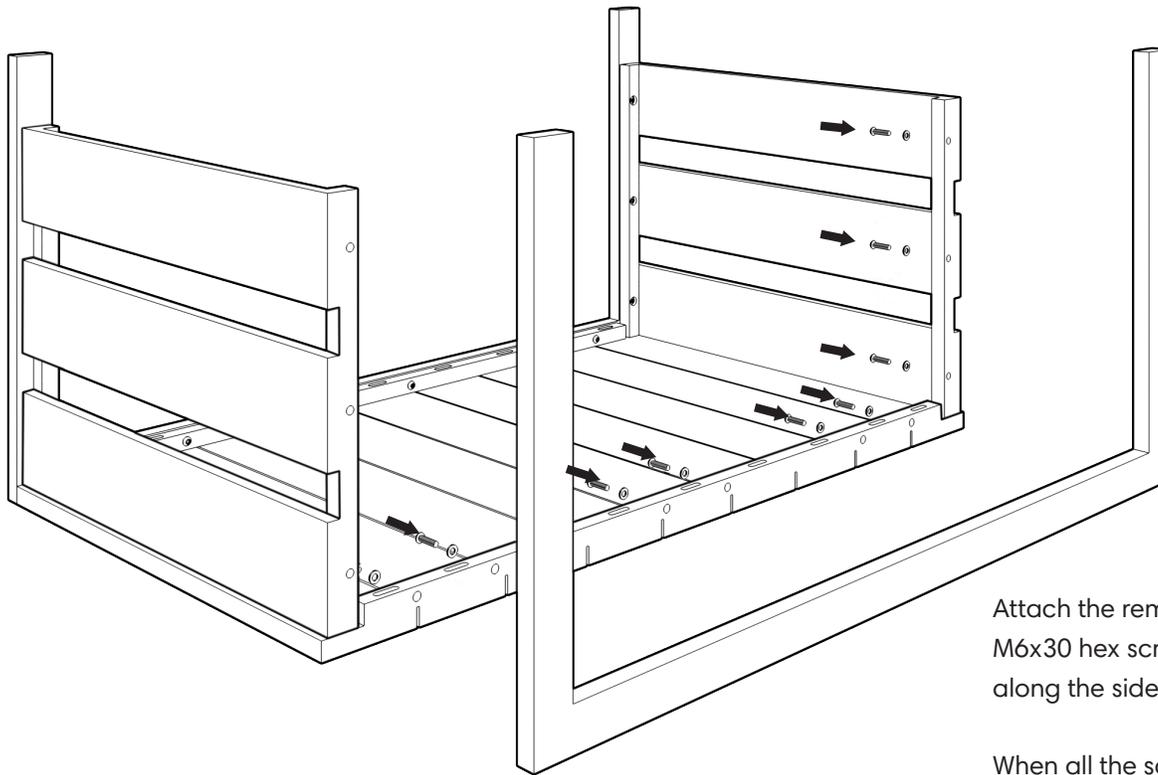

Attach the remaining leg with the M6x30 hex screws and washers along the side panels and table top.

When all the screws are in place, go back and fully tighten each screw.

Step 4: Flip Upright

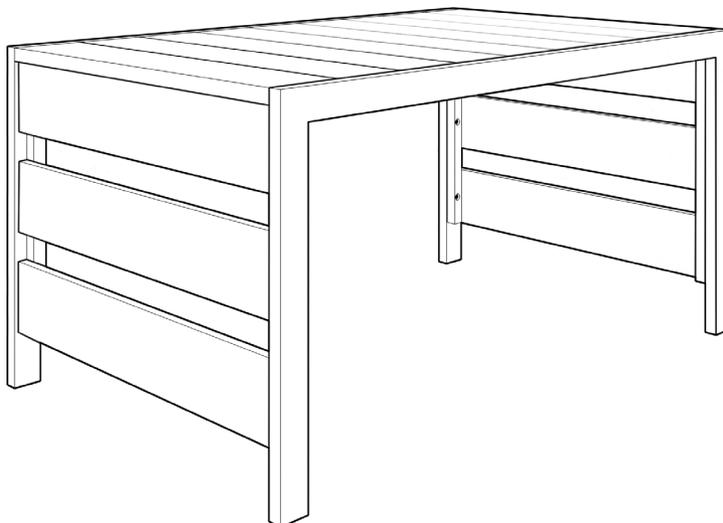

Flip the table upright and enjoy!