


chicory

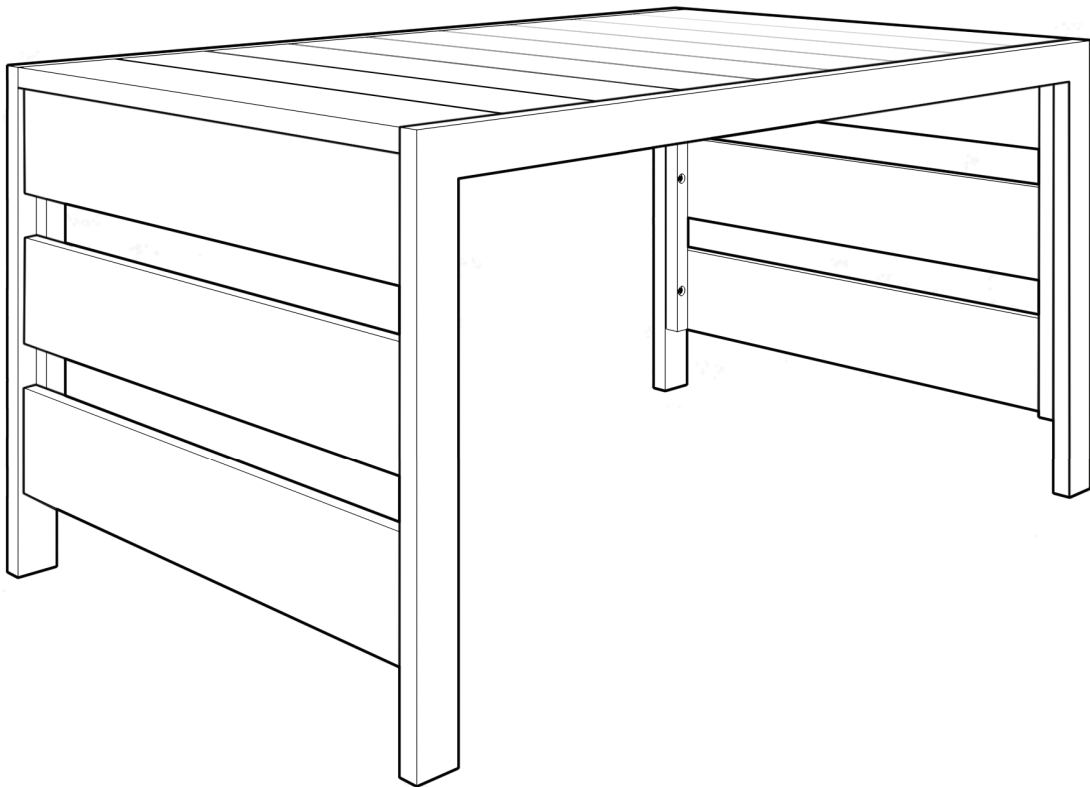

Nesting Table

You Should Have...



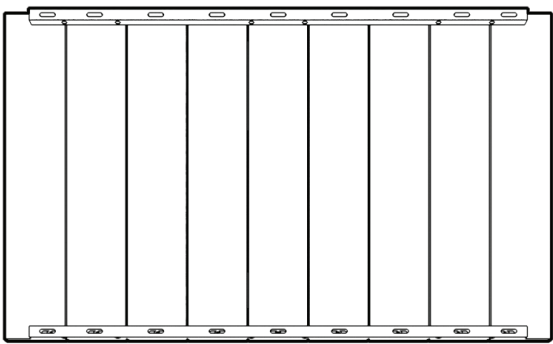


Table Top

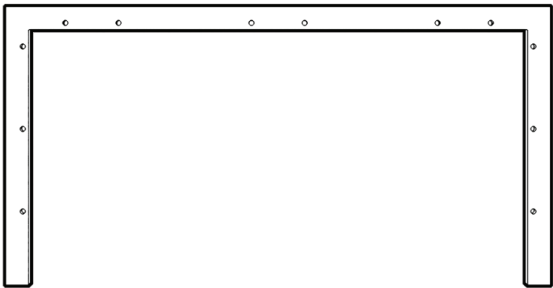

2x Legs

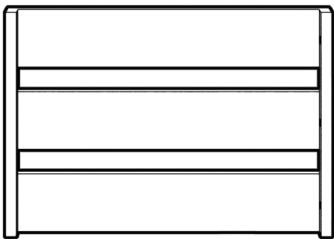


2x Side Panels




24x Washers



 5mm x 25 Hex Bit

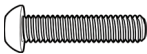

24x M6x30 Button Head Hex Screws

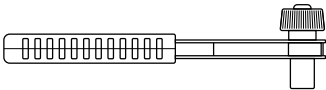 


Ratchet

Note: In the event of a return, items must be sent back in their original packing.
Please retain them or it may prevent/delay our ability to resolve your request.

Step 1: Attach First Leg


NOTE: You can start with either leg, both are identical.

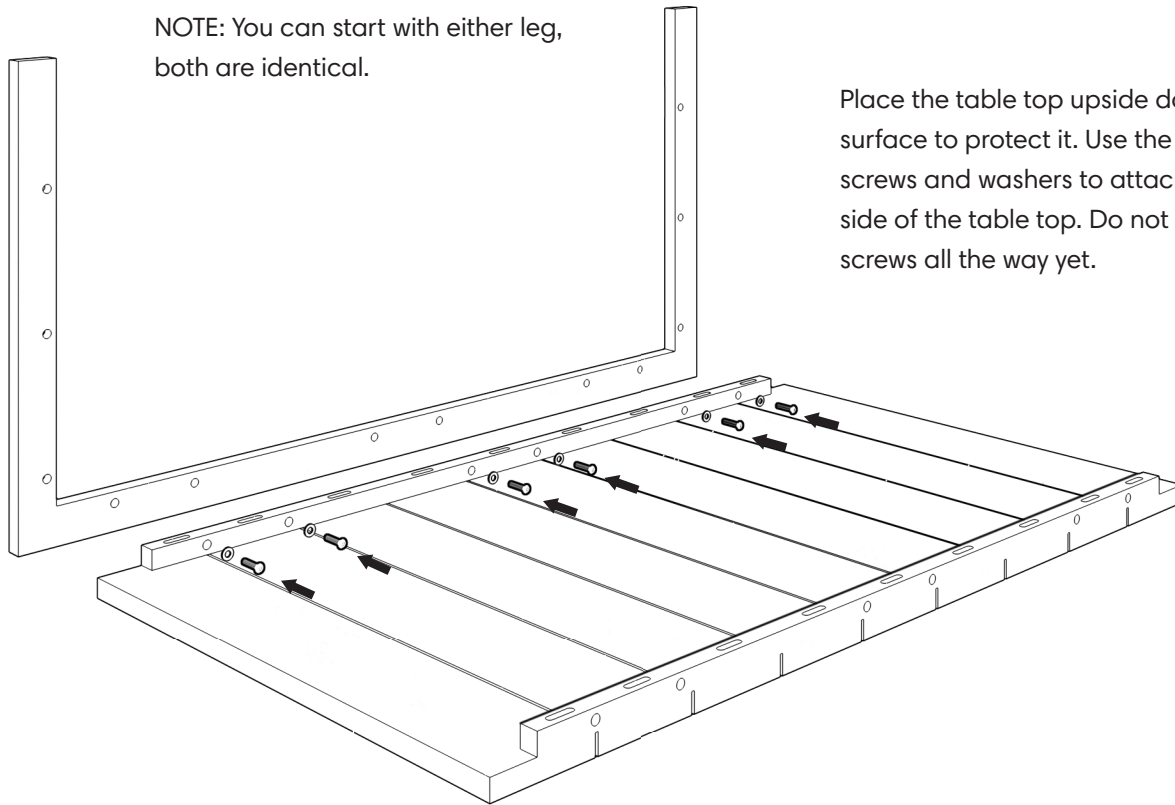

Place the table top upside down on a soft surface to protect it. Use the M6x30 hex screws and washers to attach legs to one side of the table top. Do not tighten the screws all the way yet.


Step 2: Attach Side Panels

NOTE: You can start with either side panel, both are identical.

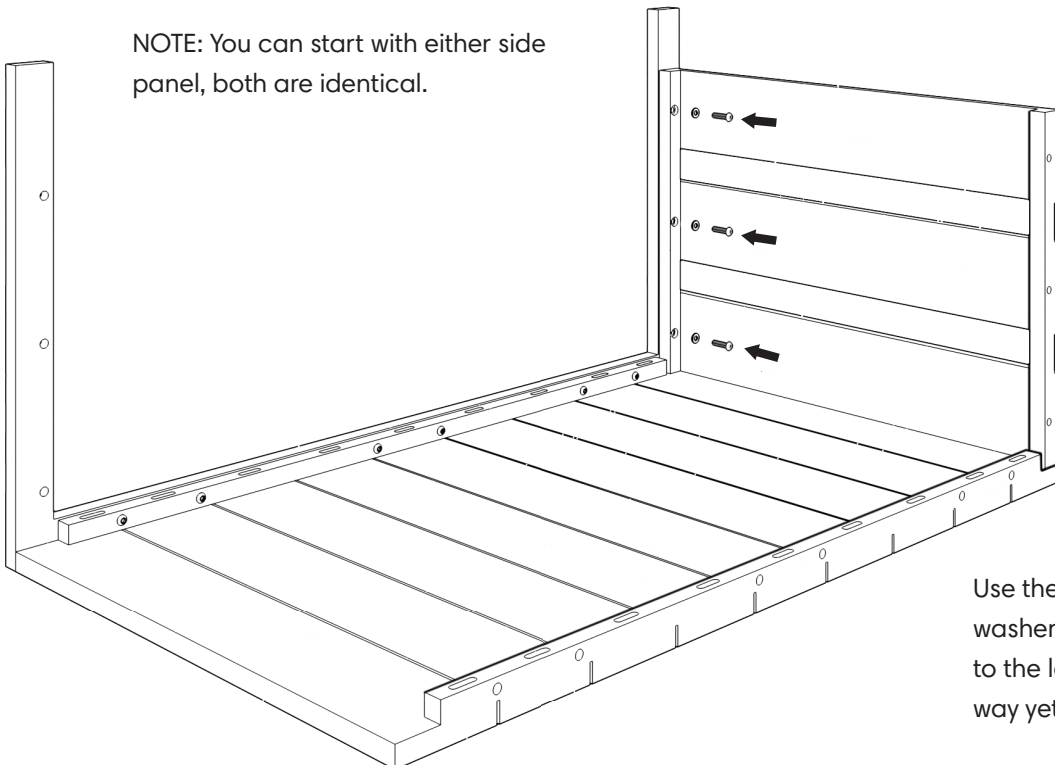

Use the M6x30 hex screws and washers to attach the side panels to the legs. Do not tighten all the way yet. Repeat for both sides.


Step 3: Attach Remaining Leg

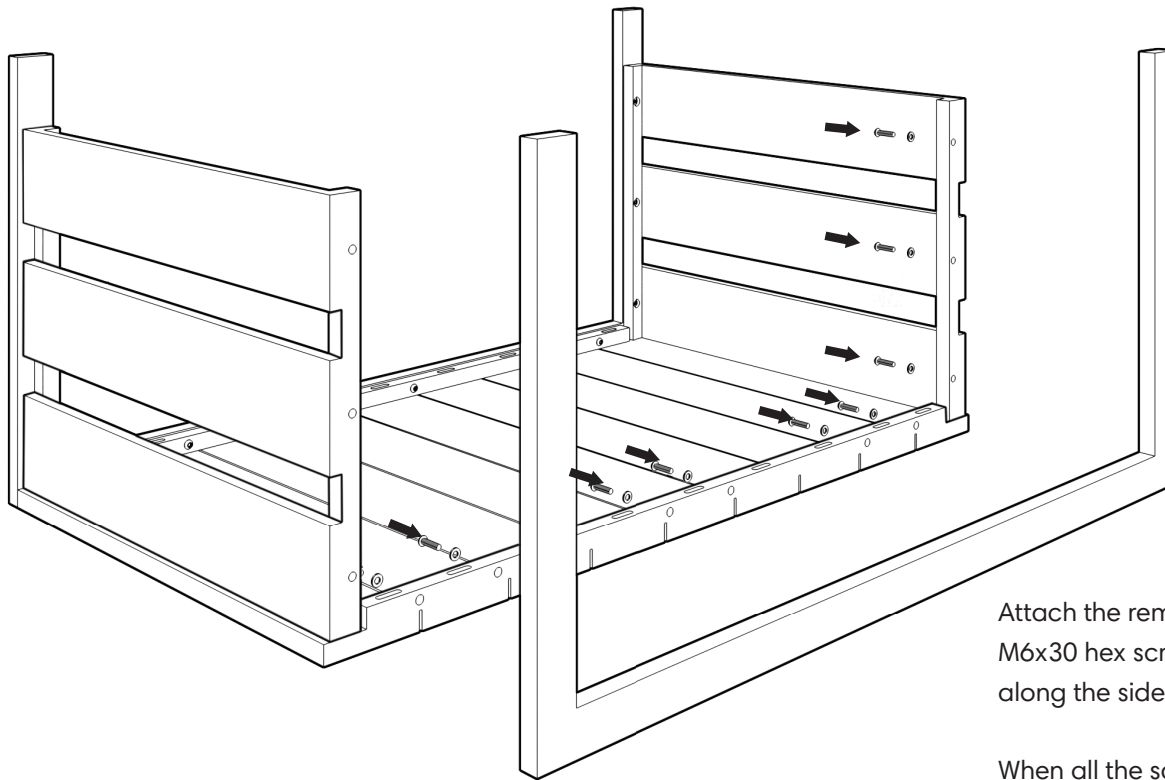

Attach the remaining leg with the M6x30 hex screws and washers along the side panels and table top.

When all the screws are in place, go back and fully tighten each screw.

Step 4: Flip Upright

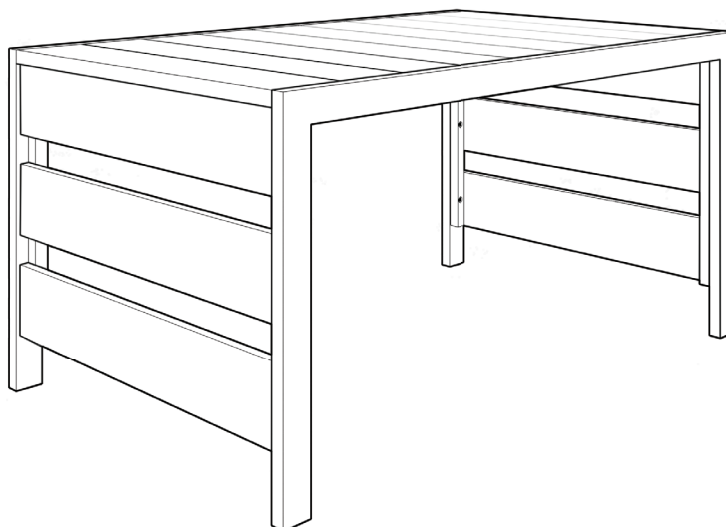

Flip the table upright and enjoy!

Long Term Care and Maintenance

Teak Wood Care: The only care your furniture needs is an occasional wash to remove any dust and oils that have built up over the seasons.

Step 1: Remove Cushions

Step 2: Wash: Spray the wood surface with water (don't use high pressure)

Step 3: Scrub: Clean any buildup or visible stains by scrubbing with a scouring pad or a soft bristle brush.

Step 4: Dry

- Gently pat the surfaces dry with a cloth.
- Let the furniture continue to dry out in the sun.
- Once the wood is completely dry, place your cushions back on the frame.

Preventing Fading: Teak wood naturally fades from golden brown to silver-gray over time. To keep it golden brown use a teak-friendly cleaner.

Rain: After rainfall saturation, teak wood will naturally bleed some of its oils. To prevent your cushions from being stained, bring them inside before the furniture gets wet, or cover with our All-Season Outdoor Protective Cover. Once the wood has a silvery-gray tone it has fully weathered and it's no longer necessary to perform this step.

Removing Mildew/Mold/Moss: Chicory's Grade A Teak is resistant to water and moisture however it's not impossible for it to be affected by mildew, mold or moss (especially when exposed to significant levels of moisture). To remove, use a teak-friendly cleaner or make your own by mixing 1 cup of any household bleach, 1 cup of washing powder or dish soap, and ½ of a bucket of warm water. Soak the affected area with the cleaning solution. Once saturated (stubborn spots may need a few minutes to soak), use a scouring pad or soft bristle brush to remove. Hose off thoroughly once done. If stubborn areas persist, repeat the process again.

Fabric Care for Oil Stains: Remove the fabric cover from cushion and wash on cold using detergent or hand wash using a mild cleaner and sponge.

For information on our 3 year Limited Warranty visit: : <https://chicoryhome.com/pages/warranty>