


chicory

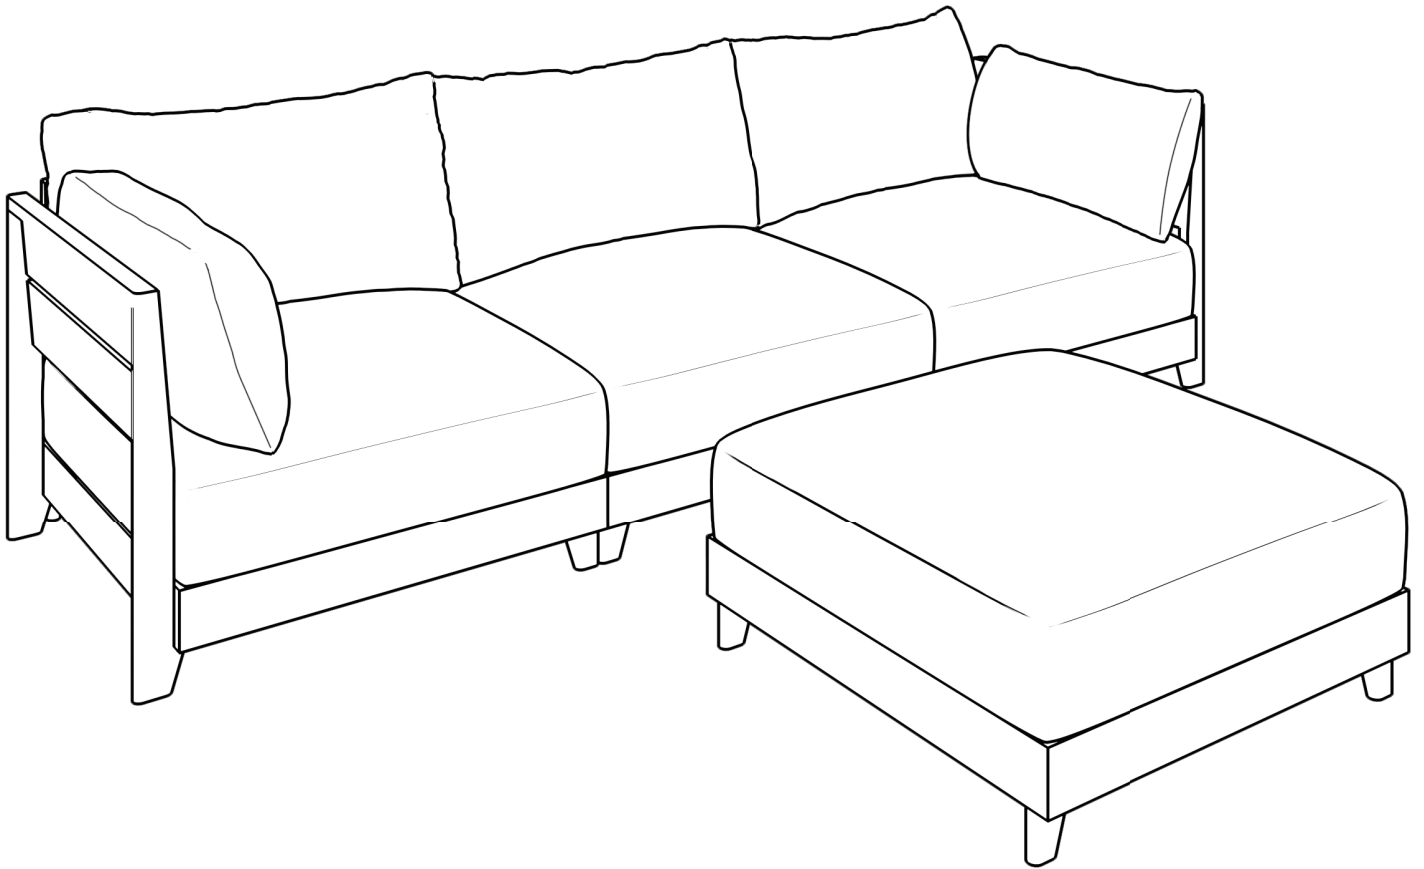


The Modular Teak Outdoor Seating Collection

These instructions apply to any configuration in this collection.


You Should Have...

The exact amount of each item you have depends on the configuration you chose.

Sofa Parts

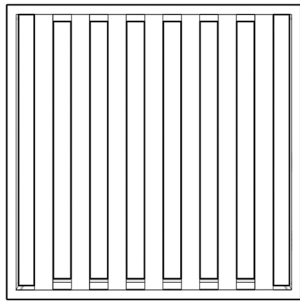


Sofa Frame

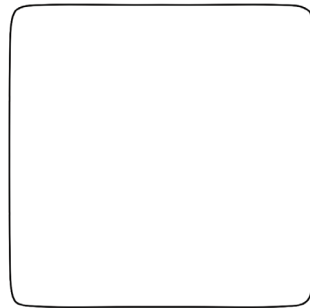


Seat Cushion




Leg

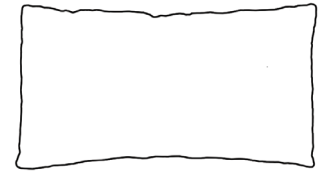

Back Pillow

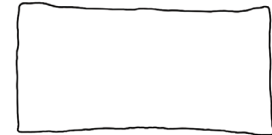


Arm Pillow

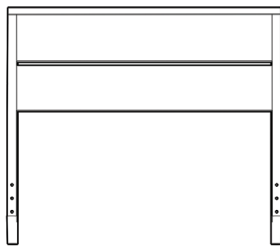


Back/Arm Panel

NOTE: The sofa frame and ottoman frame are slightly different. The sofa frame has 3 holes on each corner (to attach the back/arm panel) where the ottoman frame does not.

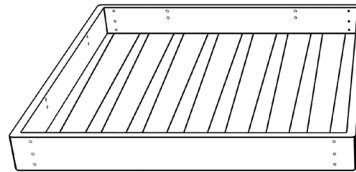


Sofa Frame

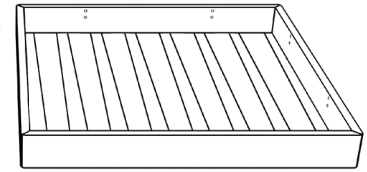


Ottoman Frame

Ottoman Parts

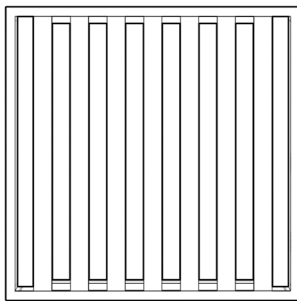

Ottoman Seat Frame

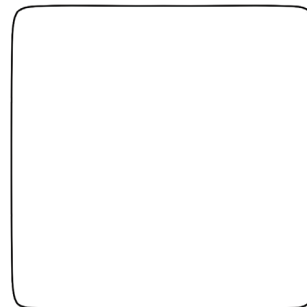

Cushion



Leg


Hardware



M6x35 Button
Head Hex Screws




Washers

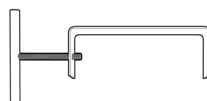

Clamps



5mm x 25 Hex Bit

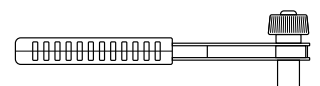


Ratchet

Note: In the event of a return, items must be sent back in their original packing.
Please retain them or it may prevent/delay our ability to resolve your request.

Step 1: Frame Layouts


Each box contains all the pieces and hardware to complete a frame.

ALIGNMENT DIAGRAM: SOFAS

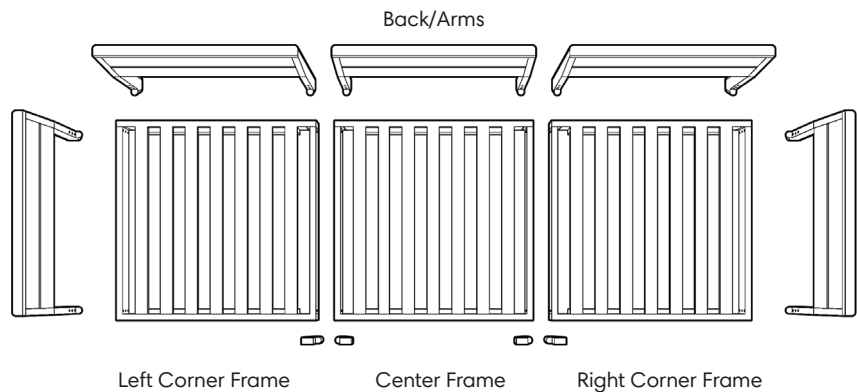


| LEFT CORNER FRAME (BOX 2) | CENTER FRAME (BOX 1) | RIGHT CORNER FRAME (BOX 2) |
|---|---|---|
| <p>Back/Arm (Two Needed)</p> <p>Front Face (Smooth Surface, No Holes or Plugs)</p> <p>Leg (Only One Needed)</p> | <p>Back/Arm (One Needed)</p> <p>Front Face (Smooth Surface, No Holes or Plugs)</p> <p>Leg (Two Needed)</p> | <p>Back/Arm (Two Needed)</p> <p>Leg (Only One Needed)</p> <p>Front Face (Smooth Surface, No Holes or Plugs)</p> |
| <p>OTTOMAN FRAME (BOX 3)</p> <p>All Four Faces (Smooth Surface, No Holes or Plugs)</p> <p>Leg (Four Needed)</p> | <p>ARMCHAIR FRAME (BOX 4)</p> <p>Back/Arm (Three Needed)</p> <p>Front Face (Smooth Surface, No Holes or Plugs)</p> <p>No Additional Legs Needed</p> | |


Step 2: Assemble Ottoman Frame

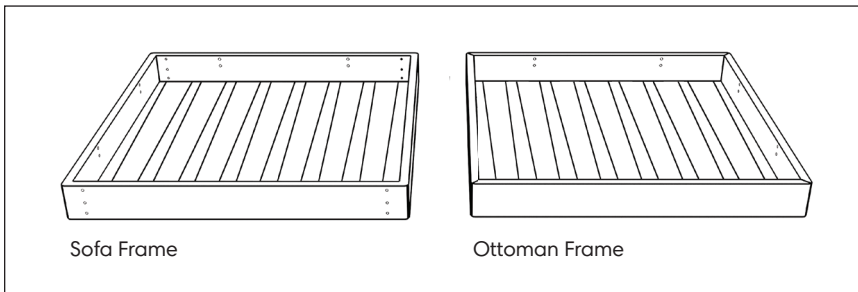

If your configuration does not have an ottoman, skip this step.

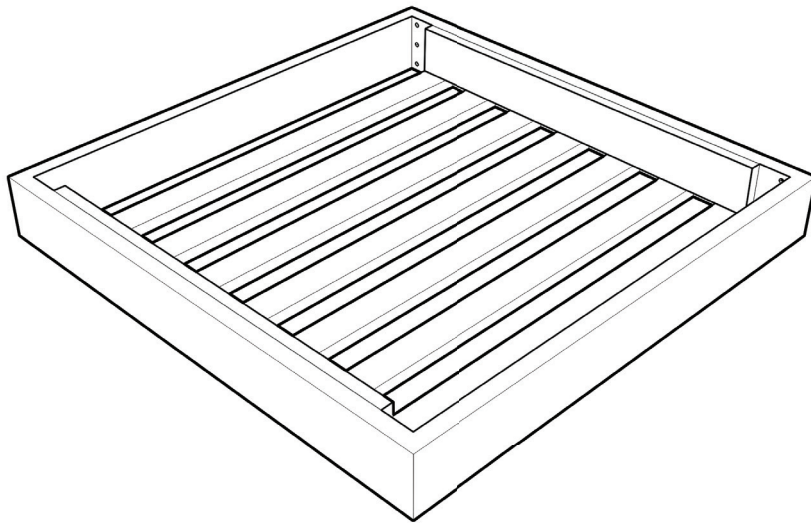



Place the ottoman frame upside down (with the slats flush to the floor) on a soft surface to protect it.

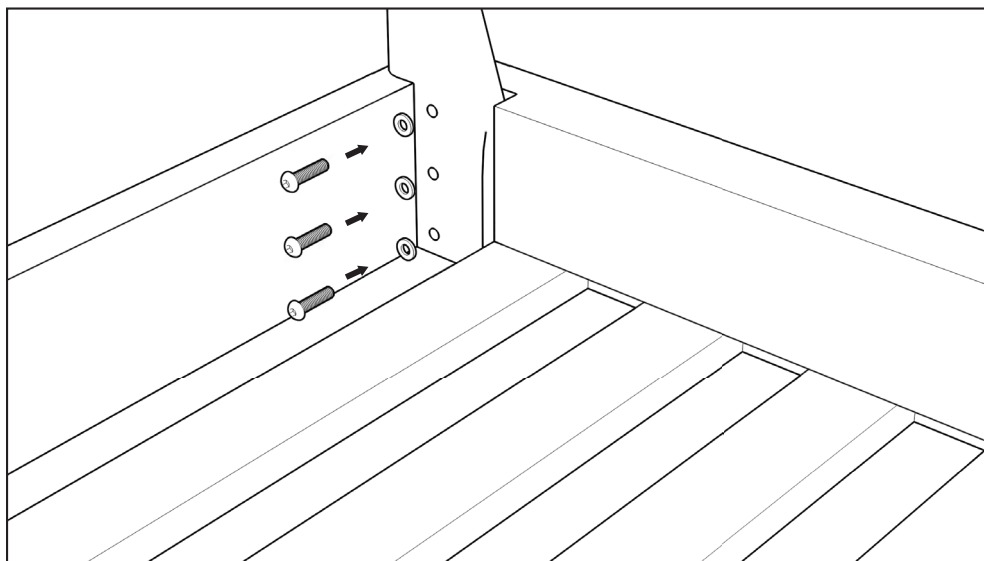

Align the leg to the corner of the frame and use the M6x35 hex screws and washers to fasten the components together. Repeat for all legs.


Step 3: Assemble Sofa Frame

Place the sofa frame on a soft surface to protect it.

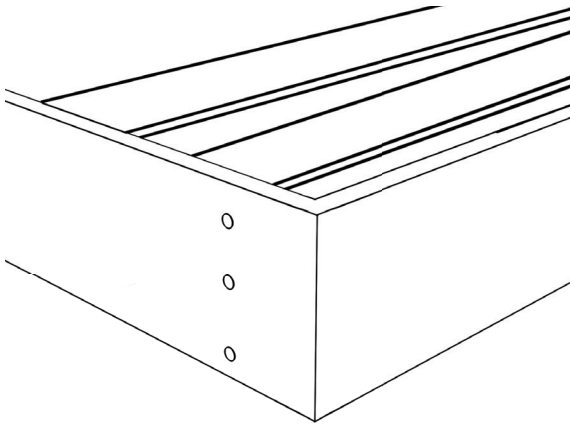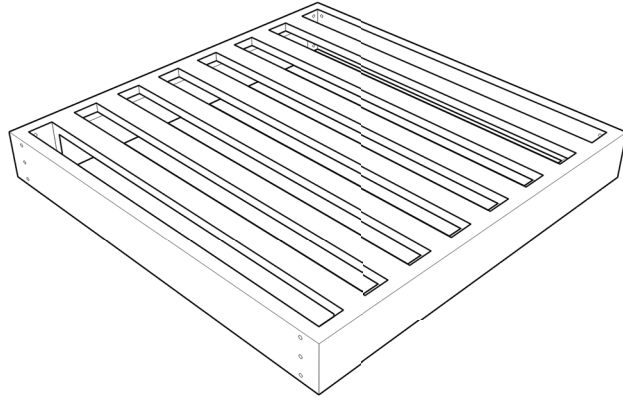

NOTE:


The sofa frames will have holes on their sides and back. The front face should have no holes in view.

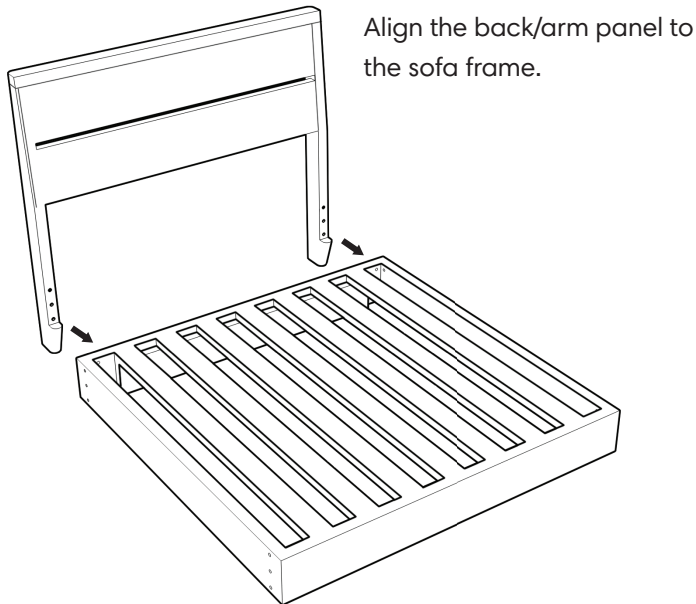



Align the back/arm panel to the sofa frame.

With the back/arm panel in place, fasten them together using the M6x35 hex screws and washers.

Repeat for all back/arm panels.

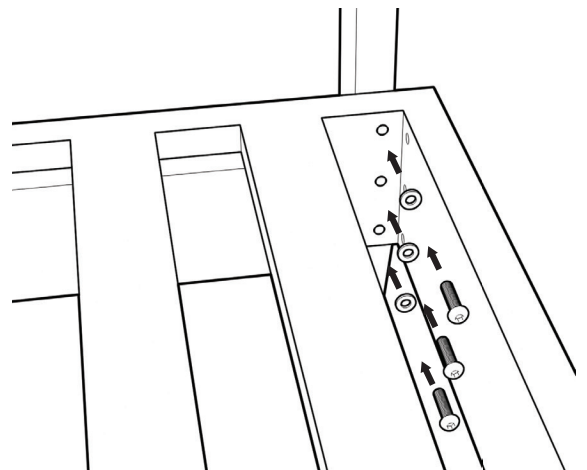


Step 4: Attach Legs

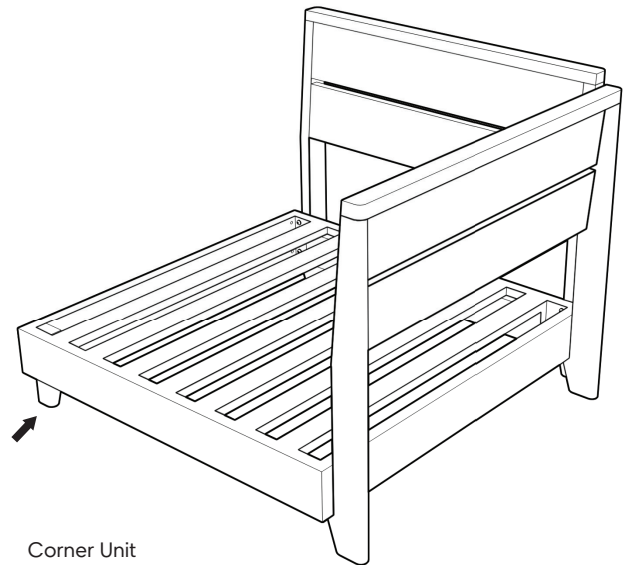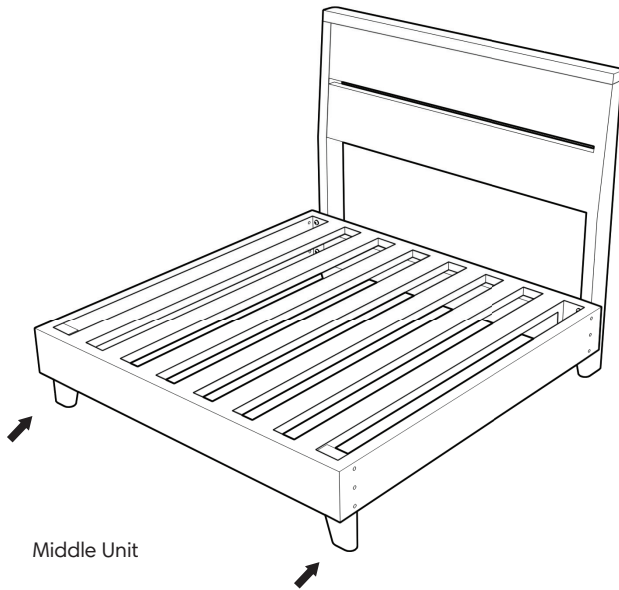


Note: A leg only needs to be attached to the corners without the back/arm panel. An armchair unit will have no legs, and only rest on the back/arm panels. See diagram above.

Rest the assembly on its side so the corners are accessible.

Fasten the sofa frame and the legs together using the M6x35 hex screws and washers. Repeat for any remaining legs.

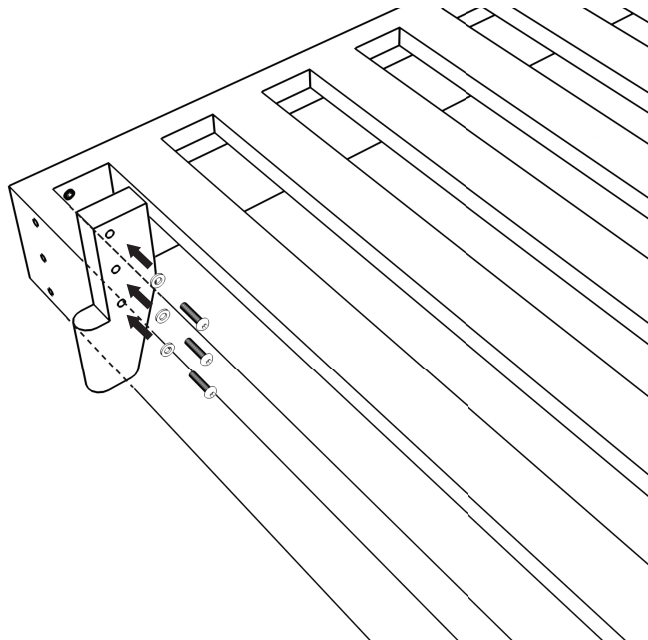

Step 5: Clamp Sofa Frames Together

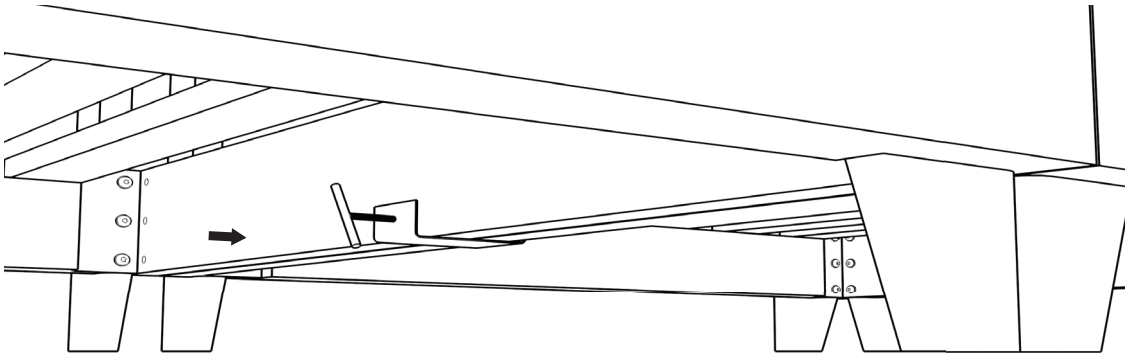

Align the sofa frames together and join each with a clamp. Twist the knob to tighten.

NOTE: The clamp can be installed on either the top or bottom of the frame. It can also be placed at any point lengthwise along the frame.

If the bracket is difficult to install, identify the flattest sides of the frame and brace those together.

Even though each side of the frame is technically made identical, there are times when one side of the frame is flatter and can be placed more flush against another frame.

Step 6: Place the Cushions

Please note that if you've selected a light colored fabric, we'd recommend wiping down the teak frame prior to placing the cushions. Run a damp cloth along the surfaces and pat or sun dry prior to setting the cushions.

Long Term Care and Maintenance

Teak Wood Care: The only care your furniture needs is an occasional wash to remove any dust and oils that have built up over the seasons.

Step 1: Remove Cushions

Step 2: Wash: Spray the wood surface with water (don't use high pressure)

Step 3: Scrub: Clean any buildup or visible stains by scrubbing with a scouring pad or a soft bristle brush.

Step 4: Dry

- Gently pat the surfaces dry with a cloth.
- Let the furniture continue to dry out in the sun.
- Once the wood is completely dry, place your cushions back on the frame.

Preventing Fading: Teak wood naturally fades from golden brown to silver-gray over time. To keep it golden brown use a teak-friendly cleaner.

Rain: After rainfall saturation, teak wood will naturally bleed some of its oils. To prevent your cushions from being stained, bring them inside before the furniture gets wet, or cover with our All-Season Outdoor Protective Cover. Once the wood has a silvery-gray tone it has fully weathered and it's no longer necessary to perform this step.

Removing Mildew/Mold/Moss: Chicory's Grade A Teak is resistant to water and moisture however it's not impossible for it to be affected by mildew, mold or moss (especially when exposed to significant levels of moisture). To remove, use a teak-friendly cleaner or make your own by mixing 1 cup of any household bleach, 1 cup of washing powder or dish soap, and ½ of a bucket of warm water. Soak the affected area with the cleaning solution. Once saturated (stubborn spots may need a few minutes to soak), use a scouring pad or soft bristle brush to remove. Hose off thoroughly once done. If stubborn areas persist, repeat the process again.

Fabric Care for Oil Stains: Remove the fabric cover from cushion and wash on cold using detergent or hand wash using a mild cleaner and sponge.

For information on our 3 year Limited Warranty visit: : <https://chicoryhome.com/pages/warranty>