



Congratulations on purchasing Chicory's outdoor furniture!

We know you are looking forward to having your piece for years to come. Follow the steps below to ensure its longevity.

About Chicory's Teak Wood

Our Grade A Teak wood is naturally durable, making it an excellent choice for long term outdoor furniture. However, Teak has naturally occurring oils that will bleed until the furniture has weathered. To prevent fabric stains, it is imperative to follow the care instructions below until the furniture has weathered.

Initial Setup: Perform these steps before first use

Step 1: Wash: Spray the wood surface with water (DO NOT USE HIGH PRESSURE)

Step 2: Scrub: Dip a scouring pad in cold soapy water & gently scrub surface

Step 3: Rinse: Gently spray down your furniture rinsing away any remaining oils

Step 4: Dry

- Gently pat the surfaces dry with a cloth
- Let the furniture continue to dry out in the sun
- Once the wood is completely dry, place your cushions on the frame.

Now you are ready to sit back and relax on your outdoor furniture!

Long Term Care and Maintenance

Teak Wood Care: The only care your furniture needs is an occasional wash to remove any dust and oils that have built up over the seasons.

Step 1: Remove Cushions

Step 2: Wash: Spray the wood surface with water (DON'T USE HIGH PRESSURE)

Step 3: Scrub: Clean any buildup or visible stains by scrubbing with a scouring pad or a soft bristle brush.

Step 4: Dry

- Gently pat the surfaces dry with a cloth
- Let the furniture continue to dry out in the sun
- Once the wood is completely dry, place your cushions back on the frame.


Fabric Care for Oil Stains: Remove the fabric cover from cushion and wash on cold using detergent or hand wash using a mild cleaner and sponge.

Preventing Fading: Teak wood naturally fades from golden brown to silver-gray over time. To keep it golden brown use a Teak friendly cleaner.

When it Rains: Teak wood will bleed natural oils during rainfall. To prevent your cushions from being stained, bring them inside before the furniture gets wet, or cover with our All-Season Outdoor Protective Cover. Once the wood has a silvery-gray tone it has fully weathered and it's no longer necessary to perform this step.


Not Covered by Warranty: 1) Stains on fabric from teak oil, 2) damage caused by improper use of cleaners

chicory

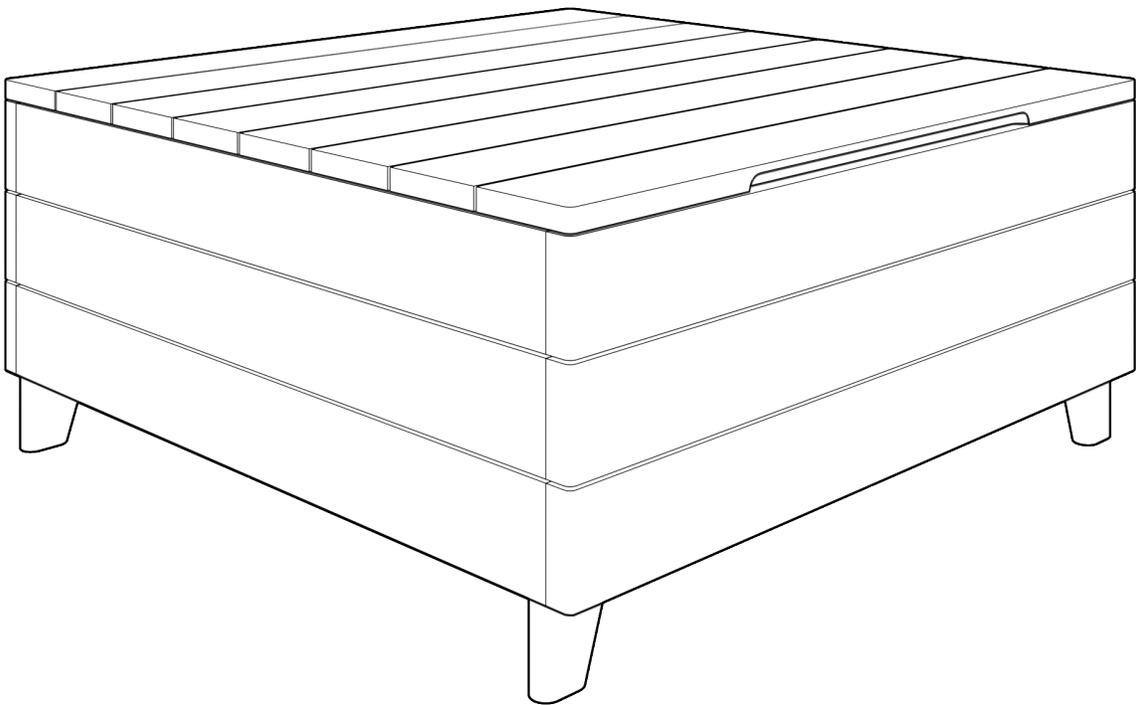


Storage Coffee Table


You Should Have...

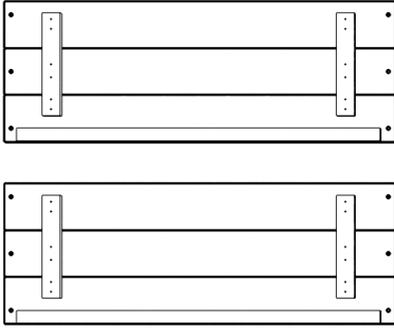


2x Side Panels

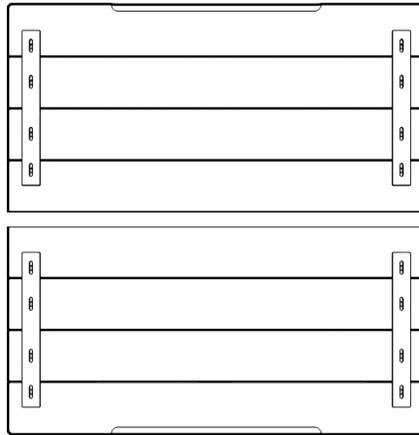

2x Lids

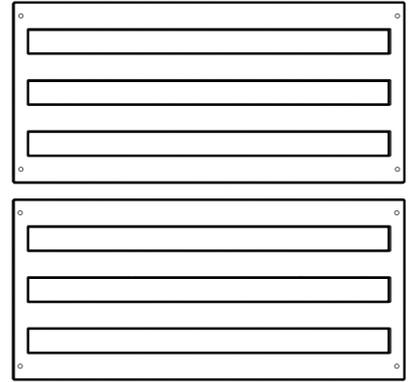

2x Bottom Panels

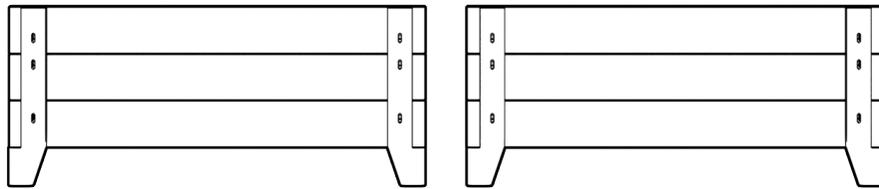

2x Side Panels with Legs



8x M6x35 Button Head Hex Screws



 
12x M6x55 Button Head Hex Screws



20x Washers




5mm x 25 Hex Bit

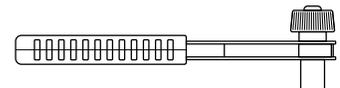

Ratchet


Note: In the event of a return, items must be sent back in their original packing.
Please retain them or it may prevent/delay our ability to resolve your request.

Step 1: Grab First Leg Panel

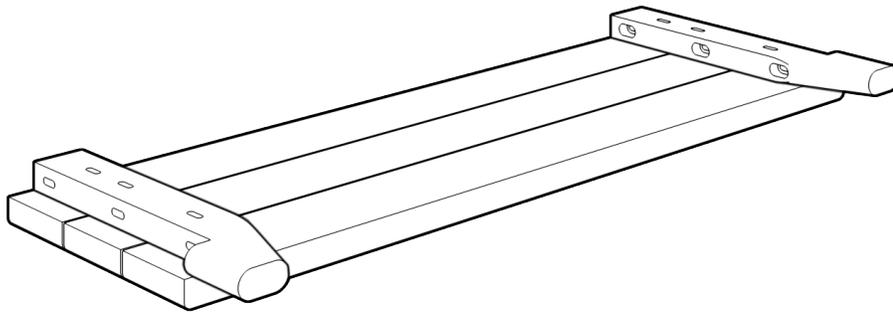

Start by laying down one side panel with the legs facing up on a soft surface.


Step 2: Attach Side Panels

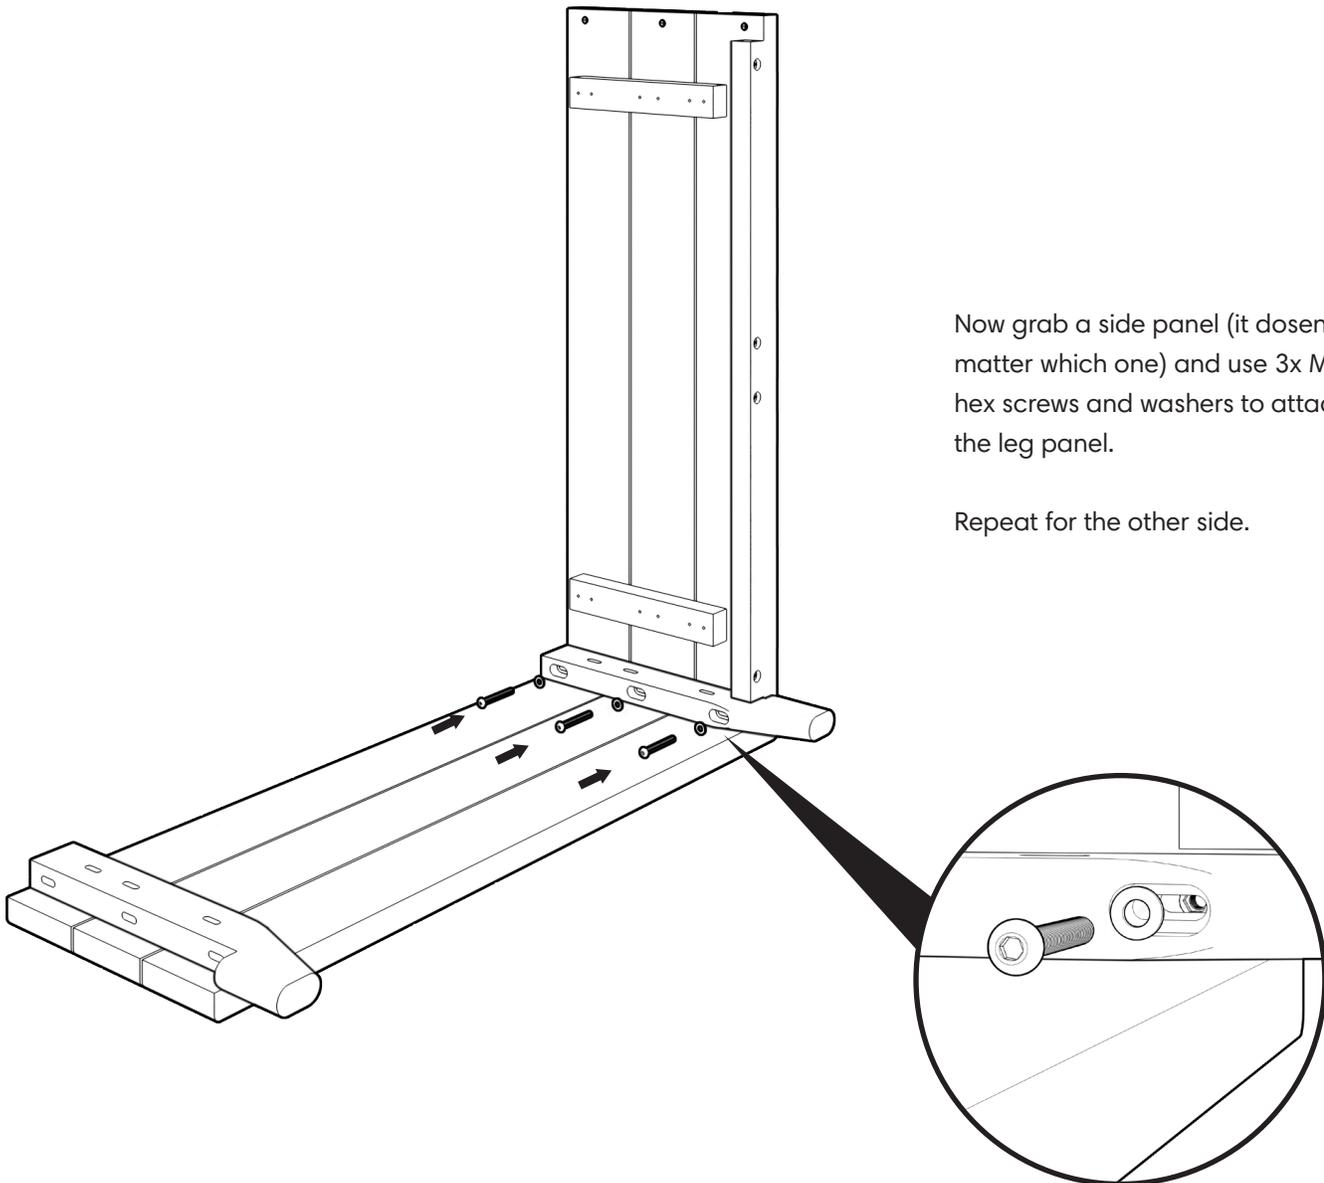


Now grab a side panel (it doesn't matter which one) and use 3x M6X55 hex screws and washers to attach it to the leg panel.

Repeat for the other side.


Step 3: Attach Bottom Panels

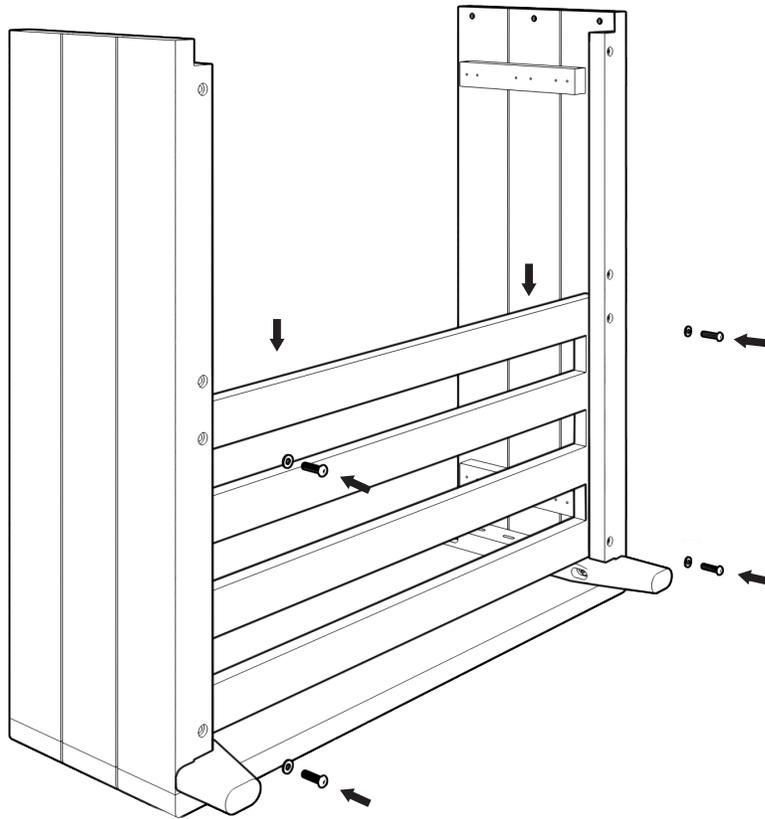

Slide the first bottom panel into place. Please note: Threaded holes are in the underside of these panels. Attach it with 4x M6x35 hex screws and washers.

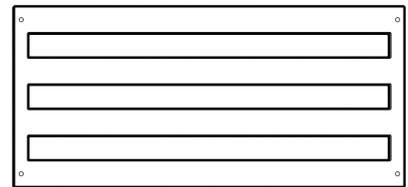

Underside of Bottom Panel

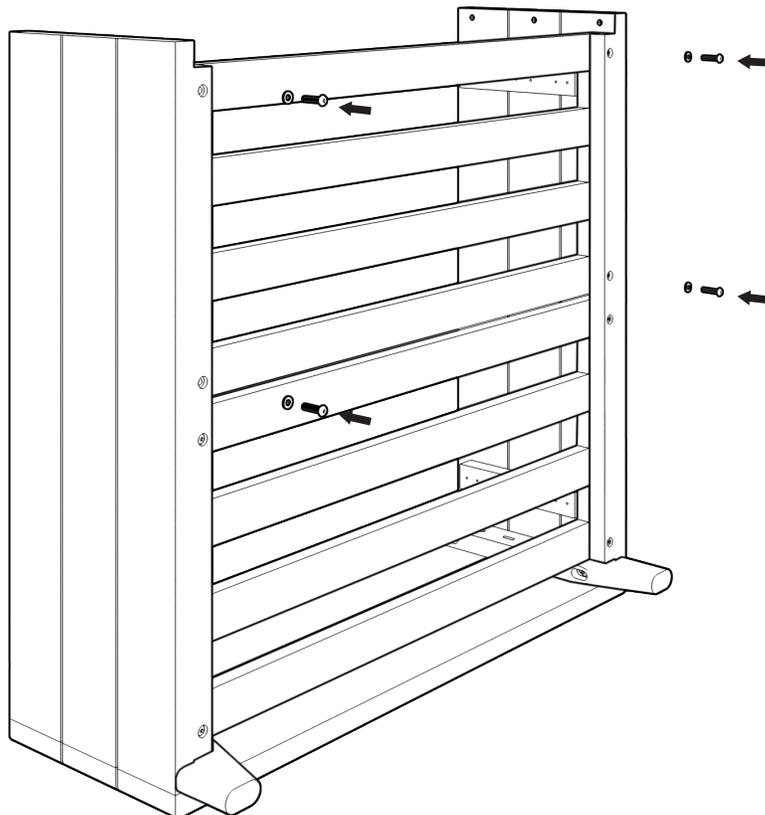


Slide the second bottom panel into place and attach it with 4x M6x35 hex screws and washers.

Step 4: Attach Remaining Leg


You're almost there!

Grab the last side panel and attach it with 3x M6x55 hex screws and washers.

Repeat for the other side.

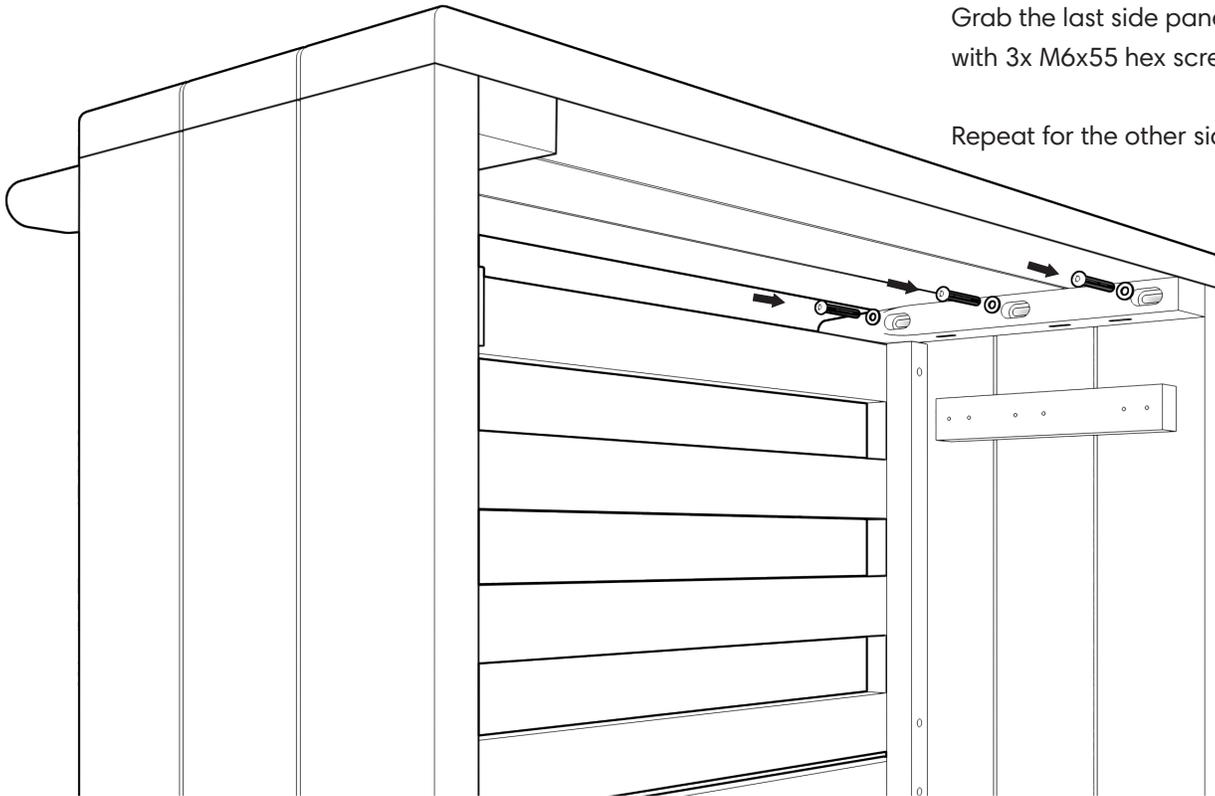

Step 5: Place the Lids

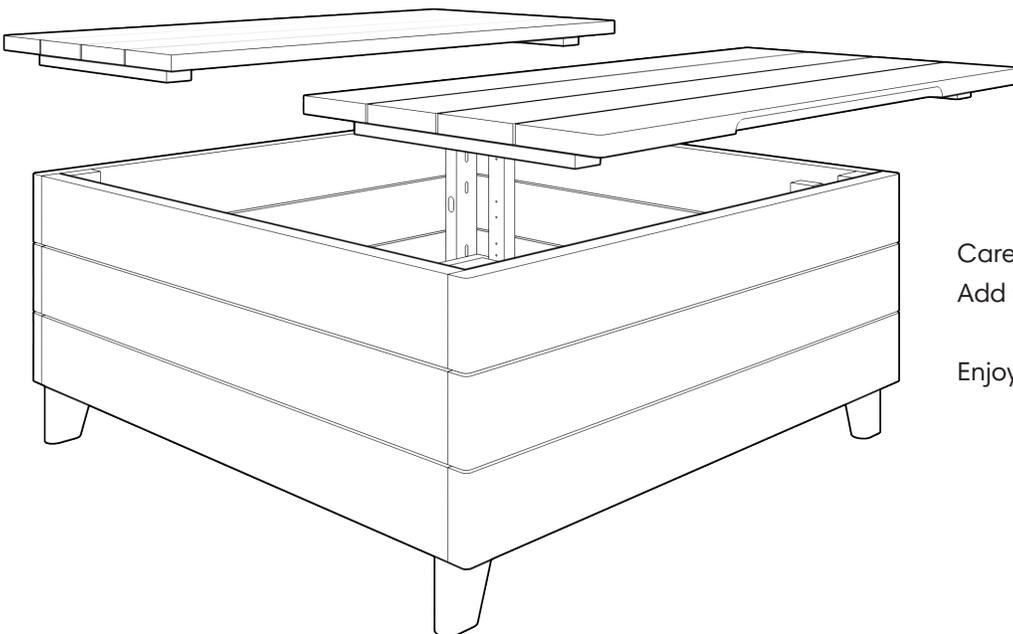

Carefully flip the table upright.
Add the lids on top and you're done!

Enjoy!